

COFFEE MAKER

INSTRUCTION MANUAL

Model: CH-4600EC

IMPORTANT SAFEGUARDS:

When using electrical appliances, basic precautions should always be followed, including:

- 1.** Read all instructions.
- 2.** Do not touch hot surfaces. Use handles or knobs.
- 3.** To protect against fire, electric shock and injury to persons do not immerse cord, plug in water or other liquids.
- 4.** Close supervision is necessary when any appliance is used by or near children.
- 5.** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6.** Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions. Or has been damaged in any manner. Return this appliance to the nearest authorized service facility for examination, repair or adjustment.

7. The use of accessory attachments are not recommended by the appliance manufacturer, such attachments may result in fire, electric shock or injury to persons.

8. Do not let cord hang over the edge of table, counter, or touch hot surface.

9. Do not place on or near a hot gas, electric burner, or in a heated oven.

10. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "Off", then remove plug from wall outlet.

11. Do not set a hot container on a hot or cold surface.

12. Do not use a cracked container or a container having a loose or weakened handle.

13. Do not clean container with cleaners, steel wool pads, or other abrasive materials.

14. Never leave the empty carafe on the keep warm plate otherwise the carafe is liable to crack.

15. Do not use appliance for other than intended use.

16. Do not use outdoors.


17. SAVE THESE INSTRUCTIONS.

HOUSEHOLD USE ONLY

Café
VALENCIA

Café
VALENCIA

NOTES ON THE CORD PLUG:

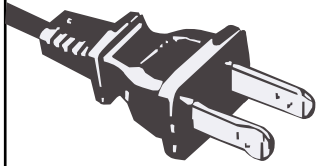


WARNING

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

- a)** A short power-supply cord (or detached power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b)** Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c)** If a long detachable power-supply cords or extension cord is used.
 - 1)** The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)** If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
 - 3)** The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

KNOW YOUR COFFEE MAKER:

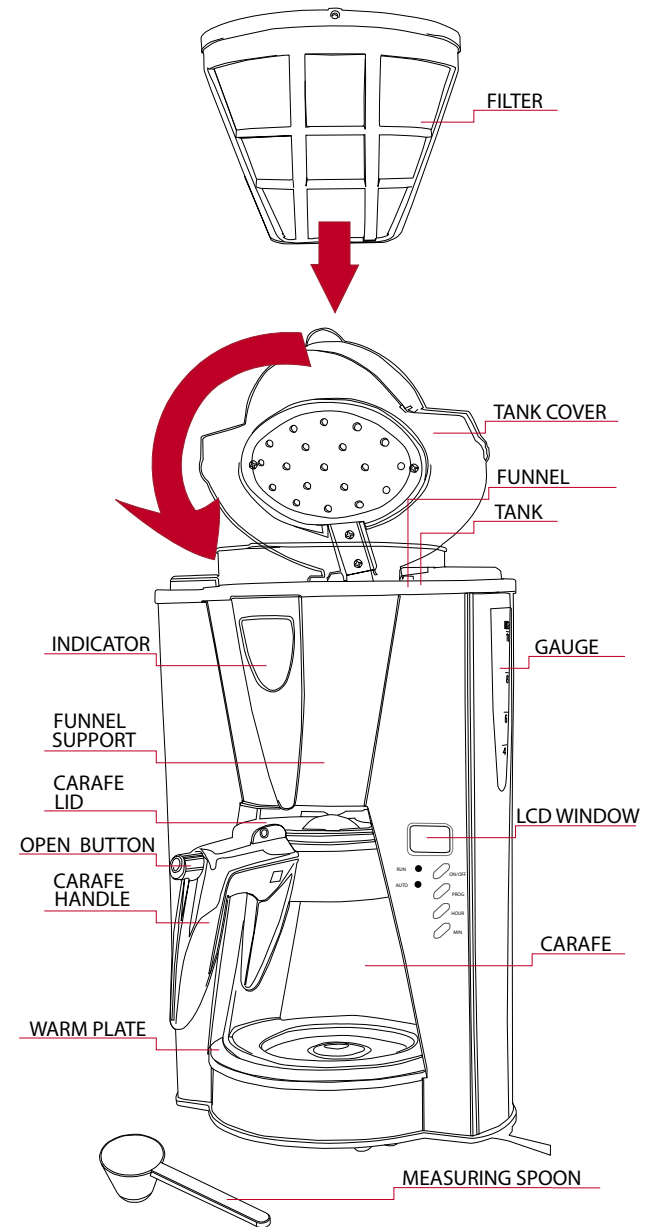

Before your first use:

Check that the accessories are complete and the unit is not damaged. Do not brew ground coffee, first. Brew clean water up to MAX marker according to the steps below for one or two times, then pour out. Clean carafe, lid, funnel thoroughly with warm water.

OPERATION INSTRUCTION:

1. Making Coffee immediately

1) Open the tank cover of the coffee maker; fill the proper amount of water into the tank with carafe. The water level should be between the MAX and MIN.

2) Place the funnel into the funnel support; make sure it is assembled correctly. Then put the filter correctly.

3) Add ground coffee into filter. Usually a cup of coffee needs a level spoon of ground coffee, but you may adjust according to your taste properly.

4) Insert the carafe in to the warm plate horizontally.

Note: The tuber of carafe must be inserted into the warm plate.

5) Plug the power cord into the outlet, the LCD window will display , “AM12:00“(Fig.1).

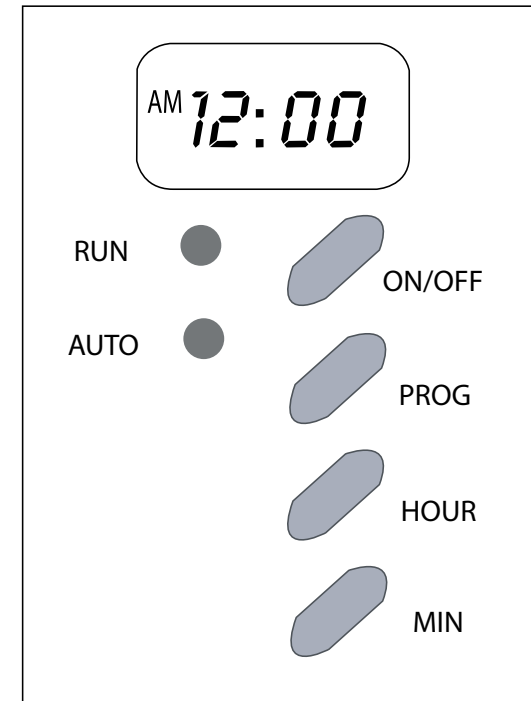


FIG.1

6) Press “ON/OFF” button, the “RUN” indicator will be illuminated. The appliance will begin working.

Note: You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time can not exceed 30 seconds.

7) Do not open the tank cover when the coffee maker is operating. The flow back of hot water will damage the appliance.

8) You can take out carafe, pour and serve when finish brewing (about one minute later after the coffee stops dripping out.)

Note: The coffee you get will have less water than you have inputted in, as some water is absorbed by the ground coffee. As safety is concerned, you had better cover the lid of carafe when pouring, that is good to keep warm too.

9) Always turn the coffee maker off and unplug the power cord from the electrical outlet when the coffee maker is not in use.

Note: Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of fresh finish coffee is high.

2. Automatic start function

If you do not want the coffee maker to start operation immediately, for example now it is **5:10 pm**, you hope that the coffee maker will automatically start at **8:15 PM**, first follow steps 1 thru 5 of the above section, and then you can set the automatic start function as follows:

1) Press **"ON/OFF"** twice, the **"AUTO"** indicator will be illuminated.

2) Press **"PROG"** button, the **"LCD"** will display **"CLOCK"**.

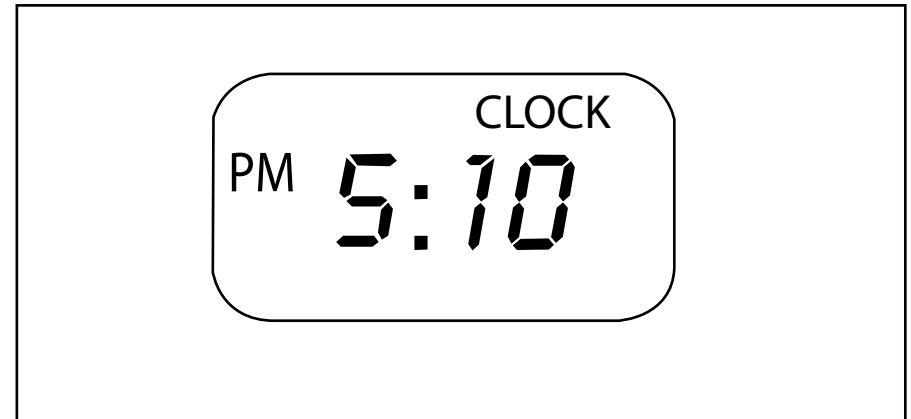


FIG.2

Set the current time by pressing the **"HOUR"** and **"MIN"**. (Fig.2)

Note: The time cycle is 12 hours, every 12 hours, the **"AM"** and **"PM"** will transform once.

3) Press **"PROG"** button, the **"LCD"** will display **"TIMER"**, then set the automatic start time by pressing the **"HOUR"** and **"MIN"**.(Fig.3)

At **8:15 PM** the **"AUTO"** indicator will be extinguished, and the **"RUN"** will be illuminated. The appliance will start automatically.

After brewing, you can replace the carafe on the warm plate. Once the coffee maker is energized, the coffee can be kept warm.



FIG.3

Note: The coffee maker unattended for 2 hours, the appliance will be shut off power automatically.

CLEANING AND MAINTENANCE:

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

- 1)** Clean the filter, carafe and carafe lid after each use in hot, sudsy water.

- 2)** Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3)** Water droplets may buildup in the area above the Filter and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- 4)** Use a damp cloth to gently wipe the warm plate. Never use abrasive cleaners to clean it.

CLEANING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly. According to the water quality in your area and the frequency use of the appliance, the detail is as follows. Fill the carafe with one part of white vinegar and three parts of cold water, pour the water and vinegar mixture into the tank, do not place into ground coffee, brewing the water-vinegar solution per "operation instruction", repeat it until no yellow liquid comes out if necessary. Pour out the mixture, brew with tap water until no vinegar odor is left.

LIMITED WARRANTY

HINTS FOR GREAT-TASTING COFFEE:

- 1.** A clean coffee maker is essential for making a great-tasting coffee. Regularly clean the coffee maker as specified in the **“CLEANING AND MAINTENANCE”** section. Always use fresh, cold water in the coffee maker.
- 2.** Store unused ground coffee in a cool, dry place. After opening a package of ground coffee, reseal it tightly and store it in the refrigerator to maintain its freshness.
- 3.** For optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- 4.** Do not reuse ground coffee since this will greatly reduce the coffee flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
- 5.** Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the ground coffee.
- 6.** Oiliness may occur more frequently if heavily roasted coffees are used.

Congratulations on your purchase of this CAFÉ VALENCIA® by WeatherWorks® product. With proper care and maintenance, this product will provide many years of enjoyment. WeatherWorks® warrants, to the original purchase, this equipment against defect in material and workmanship for a period of one (1) year from original date of purchase.

How to Get Service?

Should you discover a defect, as your sole remedy, WeatherWorks® will, send, repair or replace this product during the warranty period. Replacement postage paid, with a proof of purchase and a short description of the problem, directly to WeatherWorks®, Service Department, P.O. Box 226186, Doral, FL 33122-6186. Include your name, address, and telephone number.


What is Not Covered under Our Warranty?

Normal wear of parts, damage due to negligence or misuse, incorrect voltage or current application, or other use contrary to that noted in manual instructions, disassembly, alteration or damage caused by unauthorized service, breakage of glass or window components are not covered under this warranty. WeatherWorks® shall not be liable for any incidental or consequential damages for breach of any expressed or limited warranty on this product.

You're State's Laws May Additionally Affect this Warranty.

Some states do not allow the exclusion limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you special legal rights, and you may have other rights which vary from state to state.

Congratulations on purchasing your new
COFFEE MAKER
by
CAFÉ VALENCIA,
a quality WeatherWorks product.

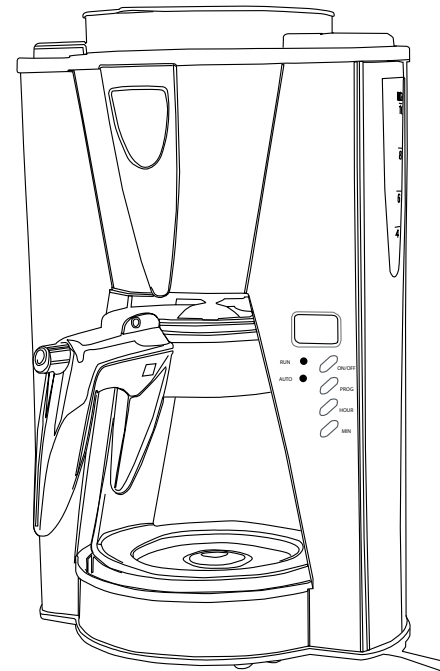

CAFÉ VALENCIA

Service Department,
P.O.Box 226186
Doral, FL 33122-6186
(866) 369-4170
www.weatherworks.net

COFFEE MAKER

MODEL: CH-4600EC

Café
VALENCIA
"In pursuit of the perfect cup of coffee"



This Coffee Maker is one of many of our useful and convenient products of **Café Valencia®** and **WeatherWorks®** for your kitchen.

Please, visit us at:
www.cafevalencia.com
www.weatherworks.net

WEATHERWORKS, INC.
DORAL, FL 33172
1-866-369-4170

INSTRUCTION MANUAL